

Status Information

- GNSS Status
- Outside / Inside Arable Land Area
- Straight AB and Azimuth Guidance
- Assisted/Auto Steering Status
- Dynamic AB Guidance
- Automatic Section Control
- Circle Pivot Guidance
- Application Mapping

Main Menu button
access wizards, console options, mapping & guidance specifications and GNSS settings

Slide-Out Tray button
access options for Feature Bar selection

Information & Status Bar



23/06/2021 11:28

On Screen Guidance Bar



Navigation Activity (center) & Selectable Job Information

6.5 km/h

5.3 ha

Mark Point A
0.00

23.0 deg

0 No.

Action Bar
options for Guidance or Boundary selection

 
Guidance Mode

- No Guidance
- Straight AB Guidance
- Dynamic AB Guidance
- Circle Pivot Guidance
- Azimuth Guidance

Boundary Mode

- Exterior
- Interior

Interactive Map
pinch / push to zoom



Mini-map
with quick access between Vehicle View and Field View

TwinView

display both guidance and UT information



Vehicle Touch Application Mapping
touch vehicle to start / stop mapping

WELCOME
Once the power up sequence has completed, the Welcome screen will appear with the options to select a different language, switch console units and change the local time zone.
Press OK to advance to the Vehicle Wizard.

On the Settings Menu, select the "Device" menu to establish an Application Mapping device.

ESTABLISH AN AB GUIDELINE

Select Guidance Mode on Feature Bar.
From Slide-Out Tray , select a guidance mode .
At start location, press Start Guideline on the Action Bar.
At end location, press Finish Guideline on the Action Bar.

SWITCH GUIDELINE

Enter new unique guideline name.
Select Guidance Mode on Feature Bar.
From Slide-Out Tray , select Switch Guideline .
Select from the listed guidelines.

Guidance Mode

- Start Guideline
- Finish Guideline
- Cancel Guideline
- Dynamic AB Detour
- Start Azimuth
- Adjust Guideline
- Nudge Guideline

Boundary Mode

- Start Exterior
- Finish Exterior
- Start Interior
- Finish Interior

Feature Bar

Feature Bar icons: **Guidance Mode** (green), **Boundary Mode** (grey), **Display Quick Adjust** (grey), **Mapping Layers** (grey), **Universal Terminal** (grey), **Close Job** (red)

Power Button

TeeJet
Technologies

MATRIX 908

Take note of your Serial Number
found on this label

It is required for Product Registration.

PRODUCT REGISTRATION



Camera Connector

Harness Connector

Ethernet Connector

Speaker

RAM Mount Connector

USB Connector

WiFi Antenna Connector

GENERAL DISTANCES

Have these distances on-hand to set up a vehicle and device.

Vehicle

- ▶ In-Line Distance from the Vehicle Pivot Point to the Hitch Point
- ▶ Lateral Distance from the Vehicle Centreline to the Hitch Point
- ▶ In-Line Distance from the Vehicle Pivot Point to the Antenna
- ▶ Lateral Distance from the Vehicle Centreline to the Antenna

Sprayer Application Mapping

- ▶ In-Line Distance from Hitch/Connection to Trailer Axle
- ▶ In-Line Distance from Hitch/Connection to Product Delivery Point
- ▶ Lateral Distance from the Centreline of the Vehicle to the Centre of the Boom
- ▶ In-Line Distance from Vehicle Pivot Point to Section 1

Spreader Application Mapping

- ▶ In-Line Distance from Hitch/Connection to Trailer Axle
- ▶ In-Line Distance from Hitch/Connection to Disc
- ▶ In-Line Distance from Disc to Leading Edge of Section 1

GNSS Antenna Connector

to setup GNSS options:

Select Main Menu button  on Information & Status Bar.

On the Settings Menu, select "GNSS Receiver".

USER GUIDE

accessible under
Field Computer options

