QUICK HITCH

**ATTACHMENTS** 

CE

Edition No: 7111-06-98

## **IMPORTANT**

### **VERIFICATION OF WARRANTY REGISTRATION**



#### **DEALER WARRANTY INFORMATION & REGISTRATION VERIFICATION**

It is imperative that the selling dealer registers this machine with Twose of Tiverton Limited before delivery to the end user – failure to do so may affect the validity of the machine warranty.

To register machines go to the Twose web site at **www.twose.com**, log onto '**Dealer Inside**' and select the '**Machine Registration button**' which can be found in the Service Section of the site. Confirm to the customer that the machine has been registered in the section below.

Should you experience any problems registering a machine in this manner please contact the Twose Office on 01884 253691.

#### **Registration Verification**

Dealer Name:				
Dealer Address:				
Customer Name:				
Date of Warranty	Registration:	/	Dealer Signature	ə:

#### **NOTE TO CUSTOMER / OWNER**

Please ensure that the above section above has been completed and signed by the selling dealer to verify that your machine has been registered with Twose of Tiverton Limited.

IMPORTANT: During the initial 'bedding in' period of a new machine it is the customer's responsibility to regularly inspect all nuts, bolts and hose connections for tightness and re-tighten if required. New hydraulic connections occasionally weep small amounts of oil as the seals and joints settle in – where this occurs it can be cured by re-tightening the connection – *refer to torque settings chart below.* The tasks stated above should be performed on an hourly basis during the first day of work and at least daily thereafter as part of the machines general maintenance procedure.

#### **TORQUE SETTINGS FOR HYDRAULIC FITTINGS**

HYDRAULIC HOSE ENDS			
BSP	Setting	Metric	
1/4"	18 Nm	19 mm	
3/8"	31 Nm	22 mm	
1/2"	49 Nm	27 mm	
5/8"	60 Nm	30 mm	
3/4"	80 Nm	32 mm	
1"	125 Nm	41 mm	
1.1/4"	190 Nm	50 mm	
1.1/2"	250 Nm	55 mm	
2"	420 Nm	70 mm	

PORT ADAP	PORT ADAPTORS WITH BONDED SEALS			
BSP	Setting	Metric		
1/4"	34 Nm	19 mm		
3/8"	47 Nm	22 mm		
1/2"	102 Nm	27 mm		
5/8"	122 Nm	30 mm		
3/4"	149 Nm	32 mm		
1"	203 Nm	41 mm		
1.1/4"	305 Nm	50 mm		
1.1/2"	305 Nm	55 mm		
2"	400 Nm	70 mm		

## **WARRANTY POLICY**

#### WARRANTY REGISTRATION

All machines must be registered, by the selling dealer with Twose of Tiverton Ltd, before delivery to the end user. On receipt of the goods it is the buyer's responsibility to check that the Verification of Warranty Registration in the Operator's Manual has been completed by the selling dealer.

#### 1. LIMITED WARRANTIES

- 1.01. All machines supplied by Twose of Tiverton Ltd are warranted to be free from defects in material and workmanship from the date of sale to the original purchaser for a period of 12 months, unless a different period is specified.
- 1.02. All spare parts supplied by Twose of Tiverton Ltd and purchased by the end user are warranted to be free from defects in material and workmanship from the date of sale to the original purchaser for a period of 6 months. All parts warranty claims must be supported by a copy of the failed part invoice to the end user. We cannot consider claims for which sales invoices are not available.
- 1.03. The warranty offered by Twose of Tiverton Ltd is limited to the making good by repair or replacement for the purchaser any part or parts found, upon examination at its factory, to be defective under normal use and service due to defects in material or workmanship. Returned parts must be complete and unexamined. Pack the component(s) carefully so that any transit damage is avoided. All ports on hydraulic items should be drained of oil and securely plugged to prevent seepage and foreign body ingress. Certain other components, electrical items for example, may require particular care when packing to avoid damage in transit.
- 1.04. This warranty does not extend to any product from which Twose of Tiverton Ltd's serial number plate has been removed or altered.
- 1.05. This warranty does not apply to any part of the goods, which has been subjected to improper or abnormal use, negligence, alteration, modification, fitment of non-genuine parts, accident damage, or damage resulting from contact with overhead power lines, damage caused by foreign objects (e.g. stones, iron, material other than vegetation), failure due to lack of maintenance, use of incorrect oil or lubricants, contamination of the oil, or which has served its normal life. This warranty does not apply to any expendable items such as blades, belts, clutch linings, filter elements, flails, flap kits, skids, soil engaging parts, shields, guards, wear pads, pneumatic tyres or tracks.
- 1.06. Temporary repairs and consequential loss i.e. oil, downtime and associated parts are specifically excluded from the warranty.
- 1.07. Warranty on hoses is limited to 12 months and does not include hoses which have suffered external damage. Only complete hoses may be returned under warranty, any which have been cut or repaired will be rejected.
- 1.08. Machines must be repaired immediately a problem arises. Continued use of the machine after a problem has occurred can result in further component failures, for which Twose of Tiverton Ltd cannot be held liable, and may have safety implications.
- 1.09. If in exceptional circumstances a non Twose of Tiverton Ltd part is used to effect a repair, warranty reimbursement will be at no more than Twose of Tiverton Ltd's standard dealer cost for the genuine part.
- 1.10. Except as provided herein, no employee, agent, dealer or other person is authorised to give any warranties of any nature on behalf of Twose of Tiverton Ltd.
- 1.11. For machine warranty periods in excess of 12 months the following additional exclusions shall apply:
- 1.11.1. Hoses, exposed pipes and hydraulic tank breathers.
- 1.11.2. Filters.
- 1.11.3. Rubber mountings.
- 1.11.4. External electric wiring.
- 1.11.5. Bearings and seals.

- 1.12. All service work, particularly filter changes, must be carried out in accordance with the manufacturer's service schedule. Failure to comply will invalidate the warranty. In the event of a claim, proof of the service work being carried out may be required.
- 1.13. Repeat or additional repairs resulting from incorrect diagnosis or poor quality previous repair work are excluded from warranty.

NB Warranty cover will be invalid if any non-genuine parts have been fitted or used. Use of non-genuine parts may seriously affect the machine's performance and safety. Twose of Tiverton Ltd cannot be held responsible for any failures or safety implications that arise due to the use of non-genuine parts.

#### 2. REMEDIES AND PROCEDURES

- 2.01. The warranty is not effective unless the Selling Dealer registers the machine, via the Twose of Tiverton Ltd web site and confirms the registration to the purchaser by completing the confirmation form in the operator's manual.
- 2.02. Any fault must be reported to an authorised Twose of Tiverton Ltd dealer as soon as it occurs. Continued use of a machine, after a fault has occurred, can result in further component failure for which Twose of Tiverton Ltd cannot be held liable.
- 2.03. Repairs should be undertaken within two days of the failure. Claims submitted for repairs undertaken more than 2 weeks after a failure has occurred, or 2 days after the parts were supplied will be rejected, unless the delay has been authorised by Twose of Tiverton Ltd. Please note that failure by the customer to release the machine for repair will not be accepted as a reason for delay in repair or submitting warranty claims.
- 2.04. All claims must be submitted, by an authorised Twose of Tiverton Ltd Service Dealer, within 30 days of the date of repair.
- 2.05. Following examination of the claim and parts, Twose of Tiverton Ltd will pay, at their discretion, for any valid claim the invoiced cost of any parts supplied by Twose of Tiverton Ltd and appropriate labour and mileage allowances if applicable.
- 2.06. The submission of a claim is not a guarantee of payment.
- 2.07. Any decision reached by Twose of Tiverton Ltd is final.

#### 3. LIMITATION OF LIABILITY

- 3.01. Twose of Tiverton Ltd disclaims any express (except as set forth herein) and implied warranties with respect to the goods including, but not limited to, merchantability and fitness for a particular purpose.
- 3.02. Twose of Tiverton Ltd makes no warranty as to the design, capability, capacity or suitability for use of the goods.
- 3.03. Except as provided herein, Twose of Tiverton Ltd shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss, or damage caused or alleged to be caused directly or indirectly by the goods including, but not limited to, any indirect, special, consequential, or incidental damages resulting from the use or operation of the goods or any breach of this warranty. Notwithstanding the above limitations and warranties, the manufacturer's liability hereunder for damages incurred by the purchaser or others shall not exceed the price of the goods.
- 3.04. No action arising out of any claimed breach of this warranty or transactions under this warranty may be brought more than one (1) year after the cause of the action has occurred.

#### 4. MISCELLANEOUS

- 4.01. Twose of Tiverton Ltd may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
- 4.02. If any provision of this limited warranty shall violate any applicable law and is held to be unenforceable, then the invalidity of such provision shall not invalidate any other provisions herein.
- 4.03. Applicable law may provide rights and benefits to the purchaser in addition to those provided herein.

## EC DECLARATION OF CONFORMITY conforming to EEC Directive 98/37/EC

We,	
of TWOSE OF TIVERTON LIMITED, 6 Chinon Court, Lower Moor Way, Tiverton Busines Park, Tiverton, Devon, EX16 6SS.	SS
declare that under our sole responsibility that the product (type)	•
This machine is one of a group suitable for fitting to tractors, or incorporating onto implement together to achieve quick hitching.	is,
Serial No. & Date:	
Manufactured by the above Company/*	
(*insert business name and full address if not stated above)	
complies with the required provisions of the Directive 98/37/EC and conforms with Europea Norm. BS EN 292	n .
Part 1: 1991 Safety of Machinery - Terminology, Methodology Part 2: 1991 Safety of Machinery - Technical Specifications	
and other national standards associated with its design and construction as listed in the Techn File.	ical
Signed Adrian Longstaf on behalf of TWOSE OF TIVERTON LIMITED Responsible Person	

## THIS MANUAL IS TO BE HANDED TO THE CUSTOMER BEFORE THE MACHINE IS TO BE USED FOR THE FIRST TIME



TWOSE OF TIVERTON LIMITED
6 CHINON COURT
LOWER MOOR WAY
TIVERTON BUSINESS PARK
TIVERTON
DEVON
EX16 6SS

TEL: (01884) 253691 FAX: (01884) 255189

All dimensions and capacities mentioned in this book are approximate. In pursuance of the Companies policy of constant development, the right is reserved to depart, without notice, from any detail illustrated or specified in this book, without incurring the obligation to provide such modifications on machines previously delivered.

No responsibility will be accepted by Twose of Tiverton Limited for any injury, damage or loss arising from the improper use or lack of maintenance of any machinery supplied by them or from any failure of the user to comply with all instructions published by Tractor or Loader manufacturers, particularly with regard to maximum load capacities, tyre pressures and stability, or with instructions and regulations pertaining to Tractor Cabs.

7111/06/98

ry file Ben Beg

## <u>INDEX</u>

INDEX	3
GENERAL INFORMATION	4
SAFETY NOTES AND WARNINGS	5
ABOUT THIS PRODUCT	6
HEALTH AND SAFETY	7
et et re	8
ere	9
NOTES	10
GENERAL INSTRUCTIONS	11
H H	12
USING THE QUICK HITCH	13
MAINTENANCE	14
	15
PARTS LIST - WARRANTY AND SPARE PARTS	16
QUICK HITCH (STANDARD CAT I AND II)	17
" " DRAWING	18
QUICK HITCH (CAT II ONLY)	19
" " DRAWING	20

3



#### GENERAL INFORMATION

NOTE:- The provision of this information is a requirement of the Health & Safety at Work Act 1974

NOTE:- This handbook has been designed to help the operator and service/mechanic to use and understand the machine fully, safely and efficiently, bearing in mind the Health & Safety requirements and the new CE requirements which come into force from January 1st 1995.

NOTE:- The handbook/manual will be supplied in a waterproof plastic outer cover to prevent damage from rain, condensation etc. The cover of the handbook will include its own part number, which includes information as to machine type and issue date of manual in question.

#### DANGER

NOTE:- It is <u>very</u> important that the handbook/manual has been read thoroughly - throughout, and is completely understood before attempting to attach or use machine in any way.

CAUTION: When ordering spares, please state clearly:-

- (a) Machine type and model No.
- (b) Part No. of component.
- (c) Description of component.
- (d) Quantity required.
- (e) Full address to which spares are to be sent.
- (f) Method of delivery required.

CAUTION:- Always insist on genuine and correct spare parts.

NOTE:- Further copies of this handbook/manual can be obtained from:-

TWOSE OF TIVERTON LIMITED
6 CHINON COURT
LOWER MOOR WAY
TIVERTON BUSINESS PARK
TIVERTON
DEVON
EX16 6SS

TEL: (01884) 253961 FAX: (01884) 255189

## SAFETY NOTES AND WARNINGS

Throughout the handbook the following sub headings are used to draw attention to various points of importance.



This is to draw attention to <u>very</u> important instructions which <u>MUST</u> be followed precisely to avoid injury or death.

#### **CAUTION**

This is used to draw attention to instructions which  $\underline{MUST}$  be followed to avoid damage to operator, machine, process or the environment.

#### NOTE:-

This is used to highlight points used for supplementary information.

## ABOUT THIS PRODUCT

This is a Quick Hitch Attachment suitable for use with any implement fitted with an 'A Frame.
It is intended to be attached to an agricultural vehicle by means of the "three-point-linkage" couple-up system. It enables implements to be connected to a vehicle quickly and easily, without the operator leaving his seat.
AT NO TIME must this product be used for anything other than, or to do any job - other than that for which it has been designed (see note above).

### **HEALTH AND SAFETY**



#### DANGER WARNING

Never attempt to assemble, couple up, or operate machinery until you understand fully the functions, controls and safety precautions required, as shown in the operators manual.



Always follow tractor safety operations and instructions <u>VERY</u> carefully.

NEVER TAKE RISKS

#### CAUTION.

Be aware of warning stickers and instruction stickers on machine as care must be taken and instructions obeyed.

#### **CAUTION**

Contact your dealer should you need advice, assistance, or if you do not understand the manual or machine. "NEVER ASSUME" - if not sure - ASK.

#### **CAUTION**

Machine <u>MUST NOT</u> be altered or modified in any way - without permission - No liability will be accepted in respect of a machine that has been modified without manufacturers permission.



Never drive machinery at speeds that could cause danger to other persons or properties, or in a manner that may cause accidents.



Never attempt to Service/adjust or work on any machinery in an unsupported state.

For Example:-

Any three point linkage mounted machinery

Front Loaders Digger Booms

Hedgetrimmer booms etc. etc.

Always ensure that machinery is safely supported and propped in position.

#### **CAUTION**

Always "SWITCH-OFF" tractor engine before attempting to carry out adjustment or service repairs and inspections, on machinery.



Always be aware of your surroundings - and operate machinery accordingly. Beware of confined-tight areas, low height restrictions, buildings and overhangs etc. Also drive and operate bearing in mind weather conditions such as sun, rain, ice, snow, wind etc. [Make allowances in all situations].

#### **CAUTION**

Never carry "passengers" on machinery or on tractor.

Ensure bystanders/onlookers are kept well away from operational area of apparatus.

#### **CAUTION**

#### 'PARKING UP' MACHINE

When machine is being removed from tractor linkage and being 'parked up' it is essential that a good firm base and level site be found.

Always chock and prop machine to ensure a good firm position to leave parked. Ensure that stand legs of machine are correctly locked into position.

#### **CAUTION**

Never allow children to play on, or around, parked machinery.

### <u>CAUTION</u>

Never wear loose fitting or ragged clothing which could get caught in machinery or controls.

#### **CAUTION**

Ensure visibility is clear through cab-screens at all times.



'A' Frames should only be attached to suitable machinery.

<u>NOTES</u>

AMENDMENT

DATE

<u>DETAILS</u>

## GENERAL INSTRUCTIONS

DANGER WARNING

- 1. Before attaching any machine to a tractor or loader make sure that implement is still standing firmly on good solid level site as it will be, providing unit was previously parked correctly.
  - -Check that any wheels are 'chocked' correctly and that supports/props are in position where necessary to prevent booms etc. dropping.
- 2. Before and during the manoeuvring of the tractor or vehicle in order to attach machinery/implements, make sure that No other persons are in the vicinity. Keep other persons well clear and make known your intentions, all the while keeping a sharp lookout whilst reversing and aligning machines for coupling up.
- 3. Always secure tractor into selected position by ensuring that brakes are applied correctly in order to prevent vehicle moving off on its own to cause injury and damage.
- 4. Make sure that the lift arms and top link ball ends of the tractor are properly fitted to the machine/implement by using correct adaptor sleeves where necessary, and that retaining pins of the correct type are used on all three point linkage points. Secure pins with relevant pin and ring assembly.
- 5. If the machine is of the drawbar type check that the hitch on the tractor is in good condition and that the hitch pin used is of the correct size and type, and is properly secured when fitted.
- 6. Should it become necessary to make any adjustments or service on machine while raised on the tractor linkage, or raised on a front end loader trestles or suitable supports <u>MUST</u> be positioned to support machine to prevent accidental dropping of lift arms, loader arms or mechanical failure.

  [MACHINE MUST ALWAYS BE PROPPED AND CHOCKED]

- 7. Never attempt to work on, adjust or service repair machinery of any kind whilst it is still running or working. Always stop the machine and STOP THE TRACTOR ENGINE before any service/repairs begin.

  (SWITCH OFF TRACTOR ENGINE BEFORE LEAVING TRACTOR SEAT)
- 8. In transit always use transport stays or locking devices where provided.

  If, as in the case of some longer machines, the unit is transported lengthways make sure that the front of the tractor is suitably ballasted to maintain stability.

  A method of achieving this would be to add suitable weights to a correctly specified and fitted front weight frame.
- 9. Always use machines in a sensible and reasonable manner and do not attempt to use them in work for which they are not intended. Avoid overloading and abusing them as this can cause damage to machine and tractor and can be very dangerous.
- When unhitching/detaching a machine from a tractor three point linkage or from a front end loader ensure that any stands or legs are securely positioned and that the machine is parked where it will not be a safety hazard or cause annoyance to others.

Make sure that chosen 'parking site' is a firm and level site.

- 11. Carry out regular periodic maintenance. Always with safety in mind.
- 12. Ensure regular maintenance procedures are maintained for the lifetime of the machine.
- 13. HEALTH AND SAFETY RULES AND REGULATIONS <u>MUST</u> BE ADHERED TO IN ALL AGRICULTURAL RESPECTS.

\_\_\_\*\_\_

# USING THE QUICK HITCH

(i) Attach the Male Quick Hitch 'A' Frame to the lift arms of the tractor and fit an adjustable top link. The top link should be adjusted so that the hitch is at the desired working angle.
(ii) Reverse up to the machinery intended to be attached and raise the lift arms so as to engage with the Female 'A' Frame of machine.
(iii) With both Male and Female 'A' Frames totally engaged:- ensure the locking pin is in place and is secure.
(iv) The attachment is now ready for use, but before starting work please read

the entire instruction book and carry out the maintenance check.

## **MAINTENANCE**

#### **WEEKLY**



Check locking pin for wear and free play - replace if necessary.

## CAUTION

Check framework of attachment for any signs of fatigue or damage.

7111-06-98 15

#### **PARTS LIST**

Always order Twose genuine spares for your machine. They are correctly designed to give the best operational results.

When ordering spare parts, please specify:Type and Serial Number of machine
Part number, description and quantity of spares required.

Always make sure that you have ordered a sufficient quantity to complete the job.

<u>Always</u> make sure that you have ordered the correct parts. In some instances (eg Hydraulic Rams) parts or assemblies are, in the course of time, modified due to introduction of new materials, or improved design.

<u>Always</u> state by what means you wish the goods to be sent. In the absence of specific instructions consignments will be sent by post or railways goods service, if it is not possible to deliver by our own transport.

Always State the number of our Invoice or Sales Slip, and the reason for return should it become necessary to return any items for exchange or credit.

<u>Remember</u> that we operate a Service Department for Hydraulic Equipment which means that we can normally supply, by return, complete serviced and tested replacements.

#### WARRANTY AND SPARE PARTS

all enquiries regarding these machines and orders for spare parts must be addressed to:-

TWOSE OF TIVERTON LIMITED
6 Chinon Court
Lower Moor Way
Tiverton Business Park
Tiverton
DEVON
EX16 6SS
TELEPHONE (01884) 253691
FAX (01884) 255189


# STANDARD CAT I AND II QUICK HITCH QH/1 (MALE), WA/1 (FEMALE) WELD ON

### <u>WA/1</u>

ITEM	PART NO.	DESCRIPTION	QTY
1	041.181	'A' Frame (Female) weld-on	1

#### <u>QH/1</u>

<u>ITEM</u>	PART NO.	DESCRIPTION	QTY
2 3 4 5 6 7 8	041.201 041.182 6539 6573 120014 190050 0853 1657	'A' Frame (Male) half Pin-locking, - 'A' Frame Spring 'R' Clip Sleeve, lower link CAT 1-2 Sleeve, Top link - CAT 1-2 Pin-linkage (Lower) Pin-linkage (Top)	1 1 1 1 2 1 2
10	0832	Linch Pin	3

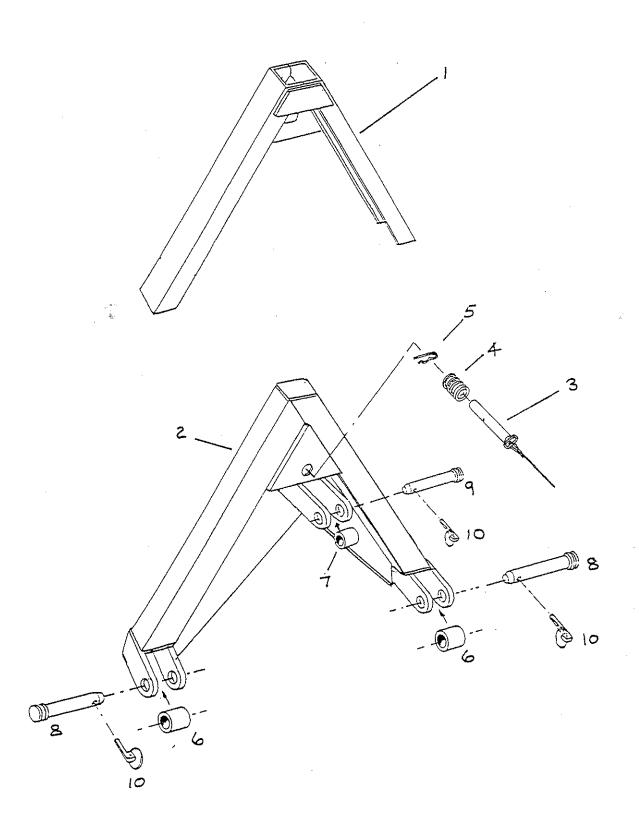

# STANDARD CAT II QUICK HITCH QH/2 (MALE), WA/2 (FEMALE) WELD ON

#### <u>WA/2</u>

1.53	<u>ITEM</u>	PART NO.	DESCRIPTION	<u>QTY</u>
	1	041.203	'A' Frame (Female)	1
	2	041.207	Plate Keeper	1
	3	3141	Setscrew	1
	4	2736	Locknut	1
	5	7910	Setscrew	2
	6	3332	Flatwasher	2
	7	4421	Stiffnut	2
				27

#### QH/2

<u>ITEM</u>	PART NO.	DESCRIPTION	QTY
8	041.204	'A' Frame (Male)	1
9	041.205	Trip Lever	1
10	041.206	Latch	1
11	041.208	Guide for Spring	1
12	8099	Spring (Ref. 152)	1
13	7711	Linkage Pin	2
14	2584	Linkage Pin (top)	1
15	0832	Linch Pin	3
16	2953	Bolt	1
17	3082	Stiffnut	1
*	5869	Rope (fit to hole in 041.205 - Trip Lever)	1

