






MINI MOTION CONTROLS  
Operation Manual

# MINI MOTION CONTROLS

Power ON



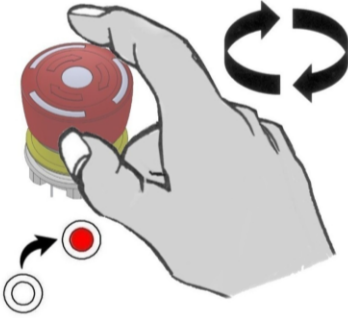


Power OFF / EMERGENCY STOP



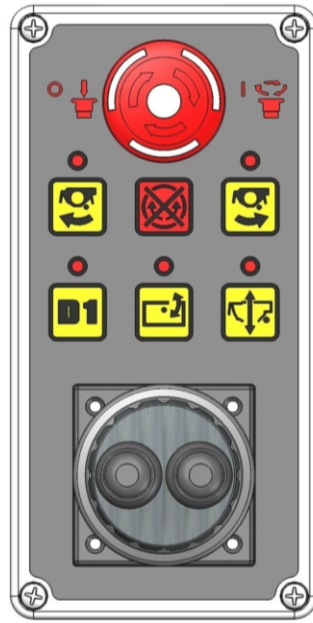
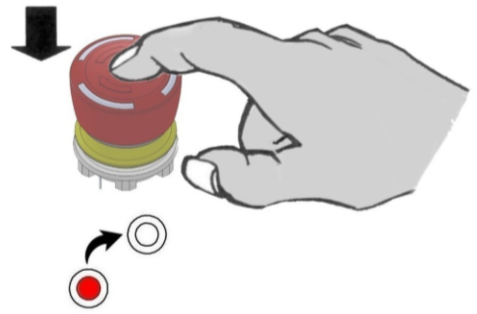


Default Control:

- X Axis: Lift Operation
- Y Axis: Reach Operation
- Z Axis: Angle Operation
- B1+Z Axis: Slew Operation
- B2+Y Axis: 5th Service

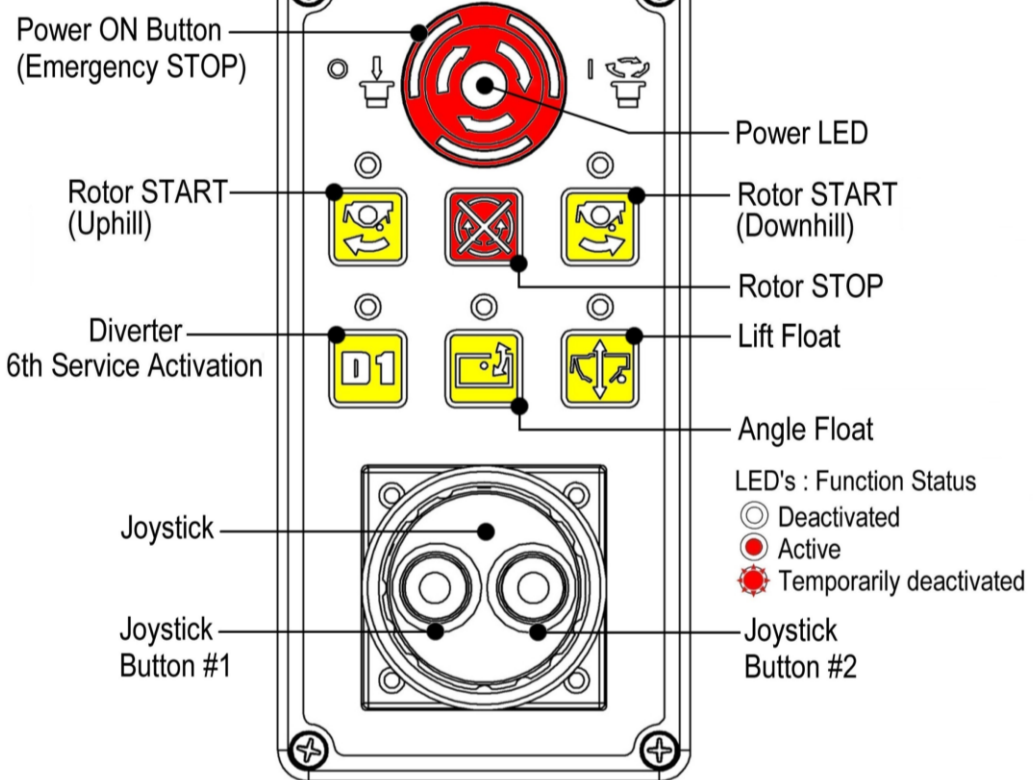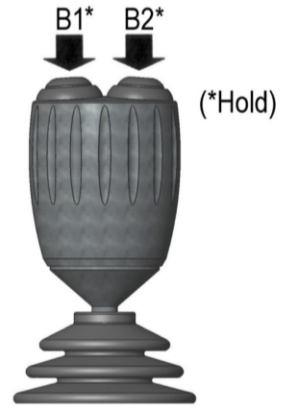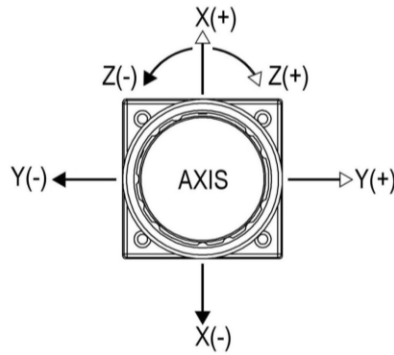




# Arm Operation Controls

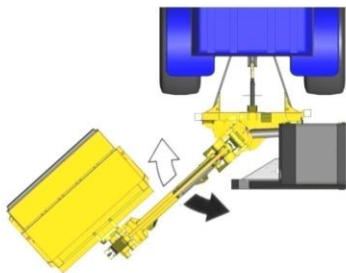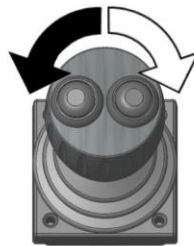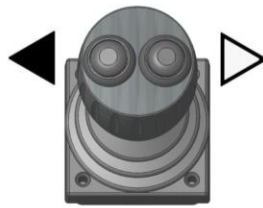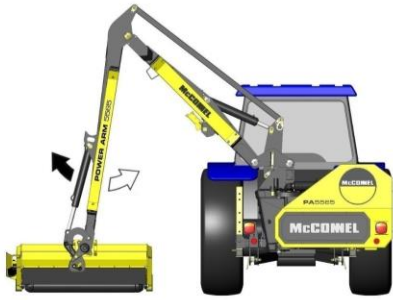

B1\*  
\*Press & Hold






+

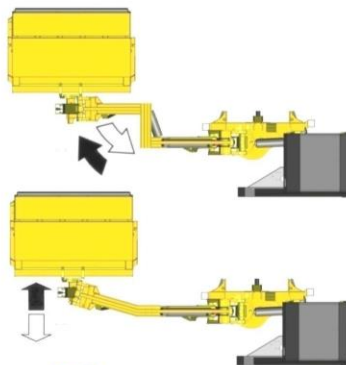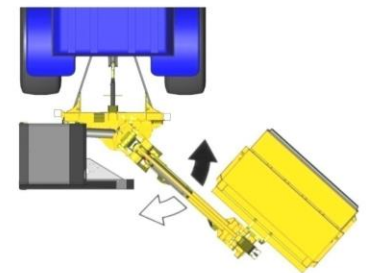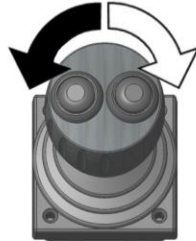


B2\*  
\*Press & Hold





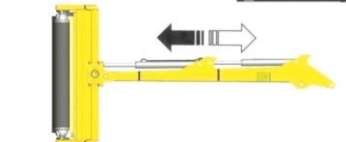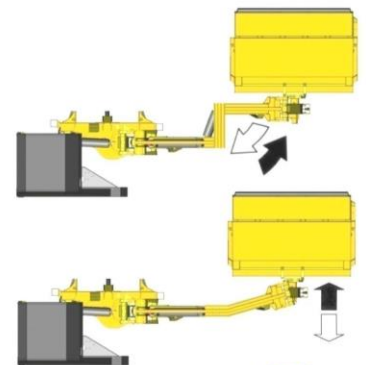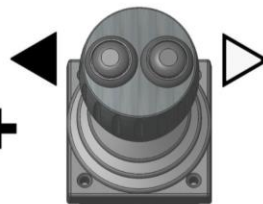



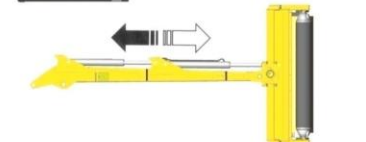


+



Applicable 5th Service  
(e.g. Midcut / VFR / Tele)





## Keypad Control Buttons



Button	Function	Control Operation
	Angle Float ON/OFF	Pressing the button will switch Angle Float function ON/OFF.
	Lift Float ON/ OFF	Pressing the button will switch Lift Float function ON/OFF.
	Rotor START (Uphill Direction).	Press to START rotor in uphill direction. <i>8 second delay for direction change.</i>
	Rotor START (Downhill Direction).	Press to start rotor in downhill direction. <i>8 second delay for direction change.</i>
	Rotor STOP.	Press to stop rotor. <i>Press first before direction change.</i>
	Diverter: 6 <sup>th</sup> Service Activation	Press to switch 6 <sup>th</sup> Service ON/OFF.
	Function status - OFF.	LED Light for specific control OFF.
	Function status - ON.	LED Light for specific control ON.
	Function status - Temporarily deactivated.	LED Light for specific control FLASHING.

# FLOAT OPERATION

## Angle Float ON/OFF

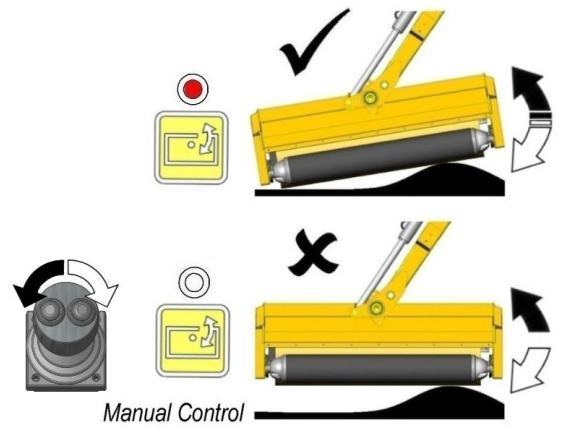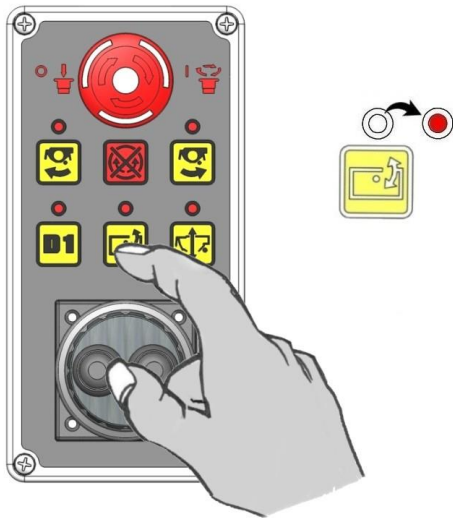


## Lift Float ON/OFF

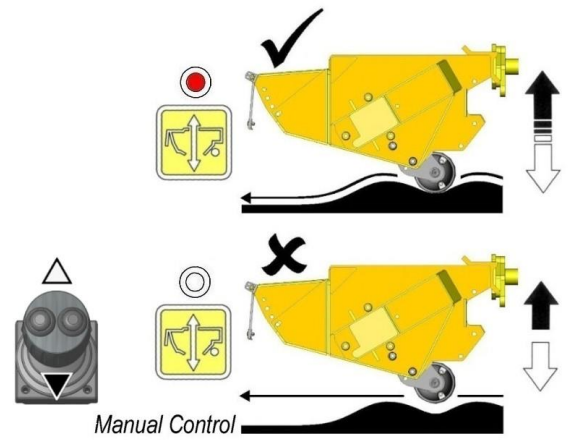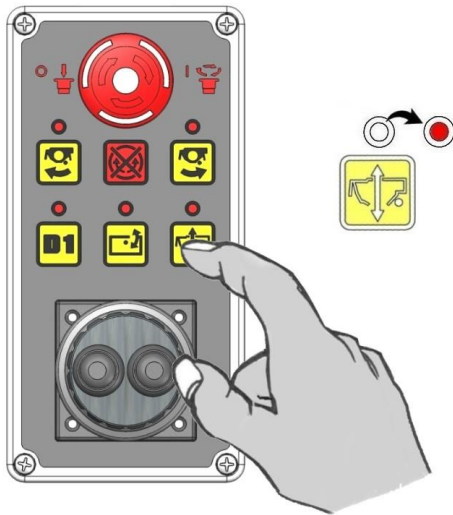




# ROTOR OPERATION


## Rotor Start - Uphill Cutting

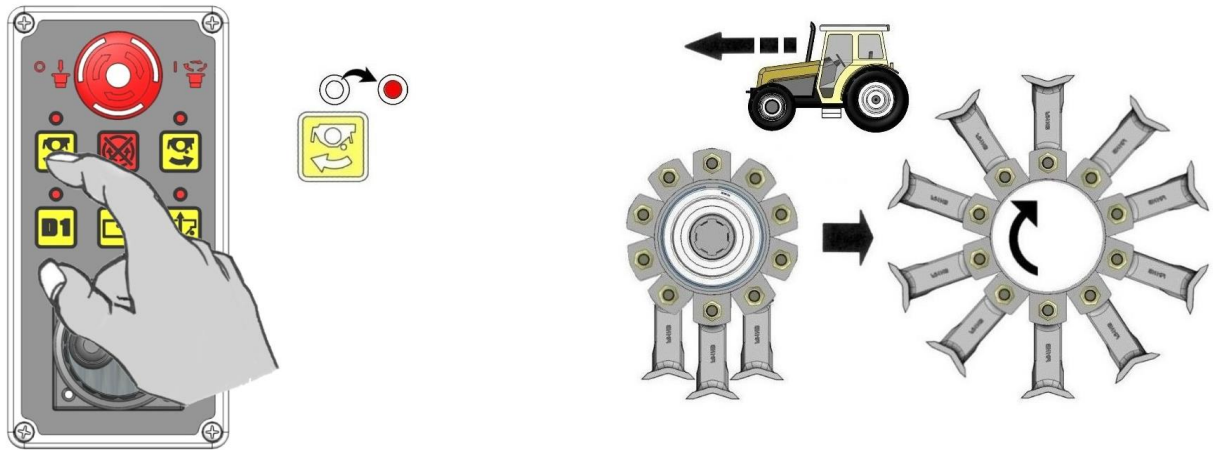

## Rotor Start - Downhill Cutting

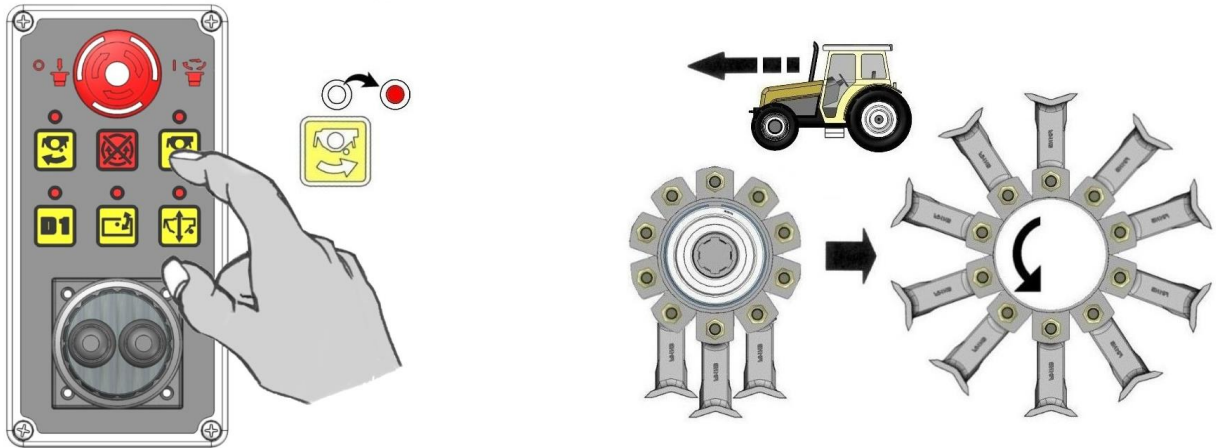

## Rotor Stop (Uphill or Downhill)

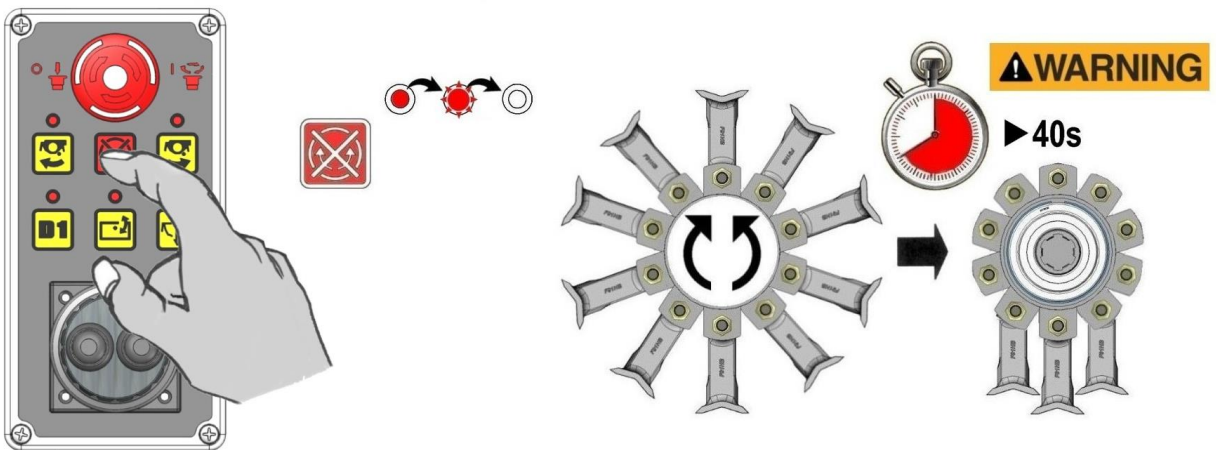

## **WARNING**



When the rotor is switched off it will continue to 'freewheel' under its own momentum for up to 40 seconds before finally coming to a standstill – do not leave the tractor cab or attempt to approach the flailhead until the rotor has stopped turning completely.





McConnel Limited, Temeside Works, Ludlow, Shropshire SY8 1JL. England.  
Telephone: 01584 873131. Facsimile: 01584 876463. [www.mcconnel.com](http://www.mcconnel.com)